


the footplate of the unit. **Do Not apply too much pressure to the brushes as this will increase power consumption and cause the brushes to wear.**

To raise the brush head press down on the brush head pedal.

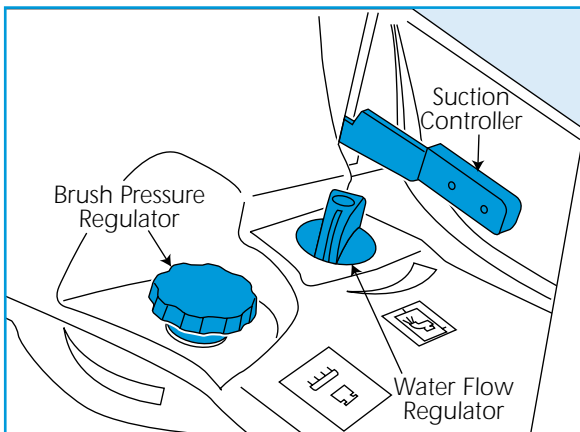

Caution

DO NOT run the unit without water.

To begin the flow of water press the water control pedal adjacent to the drive pedal, these two pedals are designed to be pressed together and therefore will deliver a higher rate of flow of water as the speed of the unit increases.

To activate suction, lower the suction bar by pushing the suction control lever down, avoid letting the suction bar drop onto the surface. To raise the suction bar, reverse the process.

Once the suction bar is lowered the suction motor will start and will suck up the dirty water.

There are two basic cleaning methods recommended for the Trike Scrubber Dryer, **to do a Maintenance Clean, use the water/brush and suction all in one pass. To carry out a Deep Clean go over the area once with the water/brush option and make a second pass with the suction only.**

The Trike Scrubber Dryer from full charge will run for about 2 – 3hours. There is a battery warning lamp that will come on when the batteries are 80% depleted, when this happens, raise the cleaning brushes, stop the water flow, lower the suction bar (if not already lowered) and suck up all remaining water. Drive the unit to a suitable place to drain the water and set the machine up for recharging.

TO DRAIN WASTE water, unhook the drain hose from the rear of the unit and place it so that it can empty into a suitable drain. When in position turn the bottom portion of the hose and let the water run out, close valve when empty and re-secure hose.

When empty refill the water tank in the manner described in SETTING UP.

Warning

Detergents can damage wildlife. Be careful to dispose of waste water in a suitable waste drain.

DO NOT drive the unit on inclines of more than 10%.

DO NOT use this unit on carpets.

ALWAYS sit astride the machine.

DO NOT carry passengers on this unit, it is designed for use by one person only.

EQUIPMENT CARE

Never push the equipment beyond its design limits. If it will not do what you want with reasonable ease, assume you have the wrong tool for the job. Ask at your local HSS Hire Shop for advice.

Keep the equipment clean. You will find this is less of a chore if you clean up regularly, rather than wait until the end of the hire period. **Pay particular attention to keeping the squeegee clean on the rear suction bar.**

When not in use, store the equipment somewhere clean, dry, and safe from thieves. Protect this equipment from frost and freezing temperatures.

FINISHING OFF

Switch OFF the machine and empty any remaining wastewater. Rinse out wastewater tank by flushing it through with clean water.

Give the unit a final clean and re-charge, ready for return to your HSS Hire Shop.



...any comments?

If you have any suggestions to enable us to improve the information within this guide please fax your comments or write to the Product Manager at the address below


Fax: 020 8687 5001

©HSS Hire Service Group Plc 2002 No. 445/01

Group Office: 25 Willow Lane, Mitcham, Surrey CR4 4TS

Web Site: <http://www.hss.com>

HSS Hire Shops

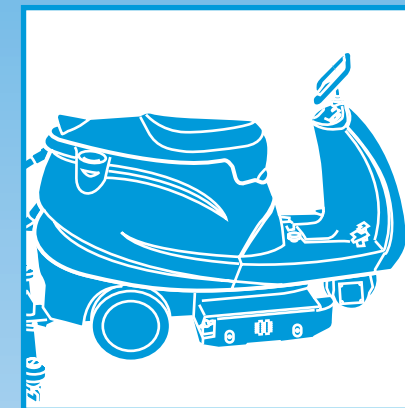

Trike Scrubber Dryer

A self propelled ride-on scrubber dryer with vacuum system to collect soiled water.



GENERAL SAFETY

For advice on the safety and suitability of this equipment contact your local HSS Hire Shop.


There is a serious risk of personal injury if you do not follow all instructions laid down in this guide.


The hirer has a responsibility to ensure that all necessary risk assessments have been completed prior to the use of this equipment.


This equipment should only be used by an operator who has been deemed competent to do so by his/her employer.

This equipment should be used by an able bodied, competent adult who has read and understood these instructions. Anyone with either a temporary or permanent disability, should seek expert advice before using it.

Keep children, animals and bystanders away from the work area. Cordon off a NO GO area using cones and either barriers or tape, available for hire from your local HSS Hire Shop.

 Never use this equipment if you are ill, feeling tired, or under the influence of alcohol or drugs.

 Wear practical, protective clothing, gloves and footwear. Avoid loose garments and jewellery that could catch in moving parts, tie back long hair.

 This equipment is heavy, never attempt to lift it.

Take all necessary precautions to protect yourself and others against the possibility of contracting infectious diseases in your work environment.

Ensure the work area is well lit and ventilated, if in doubt, ask about lighting and ventilation equipment at your local HSS Hire Shop.

Make sure you know how to switch this machine OFF before you switch it ON in case you get into difficulty.

Make sure that anyone in the immediate work area is warned of what you are doing.

Check the equipment before use. If it shows signs of damage or excessive wear, return it.

Never lift or pull the equipment by its charging power supply cable.

Always turn OFF the equipment when not in use. Never leave the equipment turned ON while unattended.

Keep cleaning equipment and chemicals out of the reach of children and pets.

Never operate electric cleaning equipment or electric switches with wet hands.

Never use HSS Scrubber Dryers to remove asbestos and similarly dangerous dusts.

Always dispose of the waste this unit creates in a responsible manner via a suitable mains drain.

Always switch OFF the equipment when not in use. COSHH Information sheets are available from your HSS Hire Shop.


ELECTRICAL SAFETY

The Trike Scrubber Dryer is designed to be re-charged by plugging straight into a standard, 230V 13A-power socket.

If the equipment fails, or if its power supply cable or plug becomes damaged, return it. Never try to repair it yourself.


Keep cables out of harms way, and clear of the work area.

Extension leads should be fully unwound and loosely coiled, away from the equipment. Never run them through water, over sharp edges or where they could trip someone.

 To reduce the risk of electric shock, use a suitable RCD (Residual Current-Operated Device) available from your local HSS Hire Shop, or power the equipment from a mains circuit with a built-in RCD.

Ensure the Trike Scrubber Dryer is switched OFF before plugging into the power supply for recharging. Always return recharging lead to housing on the unit (located underneath steering column).

SETTING UP

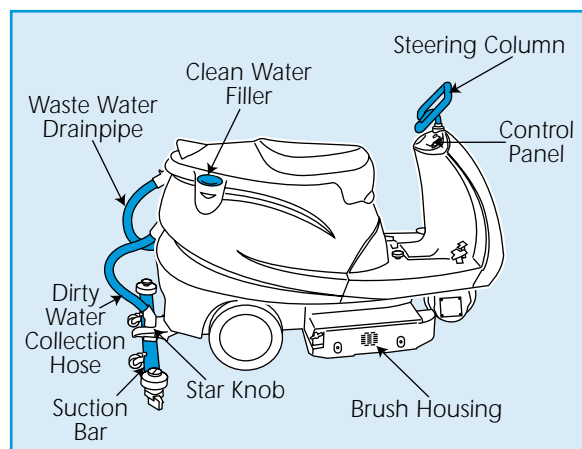

To set up the Trike Scrubber Dryer, turn the main switch to off and connect charging lead to suitable electrical socket. Charging should take 12 hours; this is best-accomplished over-night.

With the unit fully charged, unplug the unit from the mains.

Fill the main water tank with 80 litres of water or foam and cleaning chemical mix. ONLY use low foam cleaning fluids and ONLY mix them according to the guidelines supplied by the manufacturer of the fluid.

Push down the suction control lever (located beneath the seat at floor level on the left-hand side), fix suction beam to the bottom rear of the unit ensuring that the securing star knobs are sufficiently tight. Connect the dirty water collection hose to the middle rear of the unit. Ensure all connections are tight and that the waste water drain pipe is secured out of harms way. Return the suction control lever to the up position to raise the suction bar if you need to move to the work area.


If you intend to clean ceramic floors it is recommended that you adjust the pitch of the suction beam. To do this undo the star knob used to affix the bar and adjust the bar to give an oblique angle of about five degrees. Tighten knob.

The unit is ready to use.


DRIVING

The Trike Scrubber Dryer can only be used as a ride on machine.

Sit on the unit, the unit will not run until the seat is occupied, if the seat is vacated during use the unit will stop.

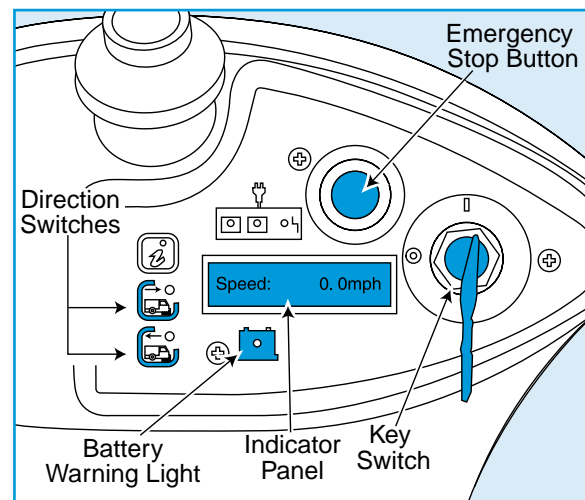

Turn the Keyswitch to the '1' position. Select the direction of drive required by pressing either of the two direction switches. The machine will not move until a direction has been selected. If using reverse make sure the way is clear behind you.

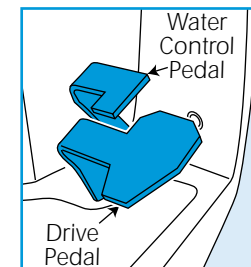

Gently press the drive pedal and the unit will move in the direction selected. Steer the unit with the steering bar. Note that the unit can move quite quickly and any co-workers should be made aware that you are going to start work.

To stop the unit in normal use, ease off the power by gently letting your foot off the drive pedal.

Caution – Do Not Let go of the drive pedal too quickly, the unit will stop suddenly and you might slide off the machine. It is advisable to have a little practice driving the unit before undertaking any work, get used to the controls and make sure you are comfortable with stopping the unit.

When the machine has stopped, set the keyswitch to '0'

In an emergency press the Emergency Stop button adjacent to the keyswitch.

GETTING STARTED

Clear the floor area of all furniture, if this is impractical, the furniture will have to be moved around as the work progresses. Tie up any long curtains that touch the floor and clear the area of any large debris.

Next, you must sweep the entire area prior to use of this machine to prevent the unit from blocking.

Drive the floor scrubber to the start of the work area.

BASIC TECHNIQUES

The Trike Scrubber Dryer offers two main modes of operation, floor scrubber with water and suction. When in suction mode the suction bar at the rear of the machine picks up the dirty water created during the scrubbing of the floor and deposits it in a waste water tank.

To operate the scrubber mode lower the scrubbing rollers by pressing the left hand brush head pedal, this will require you to press down on the pedal and at the same time apply a little forward pressure.

When lowered the brush motor will start. The downward pressure of the brushes can be controlled by turning the brush pressure regulator on the right side of

