


Rear Controls

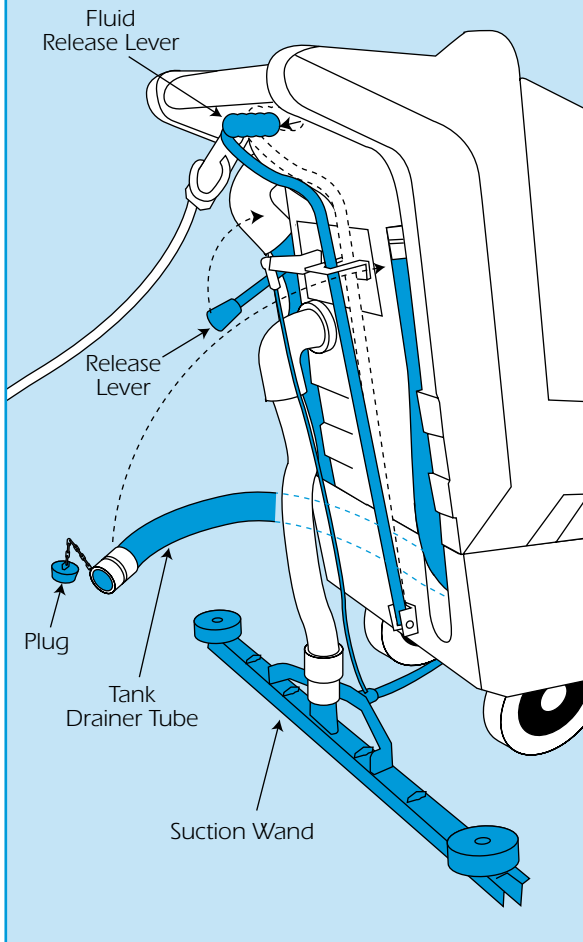

To release the cleaning fluid, move the release lever back, to stop simply release the lever.

The rear suction wand must be lowered, to do this simply pull the release lever backwards.

Treat the floor in overlapping strips, moving forward all the time, keeping the machine to a steady pace for even results.

When the soiled water receiving tank becomes full, the vacuum motor will switch OFF. When this happens, switch the brushes OFF and unplug the unit from its power supply.

Pull out the tank drainer tube, remove the plug and empty the contents into a suitable container. Replace the drainage tube with its plug securely fitted.

EQUIPMENT CARE

Never push the equipment beyond its design limits. If it will not do what you want with reasonable ease, assume you have the wrong tool for the job. Ask at your local HSS Hire Shop for advice.

Keep the equipment clean. You will find this is less of a chore if you clean up regularly, rather than wait until the end of the hire period.

When not in use, store the equipment somewhere clean, dry, and safe from thieves. Protect this equipment from frost and freezing temperatures.

Use only brushes supplied by HSS Hire Shops. Anything else may damage the equipment and your floor.

FINISHING OFF

Switch OFF and unplug the machine.

Empty both the clean water tank and the soil tank, remembering to close the fluid valve.

Give the machine a thorough clean and neatly coil its flex ready for return to your local HSS Hire Shop.

...any comments?

If you have any suggestions which would improve the information within this guide please fax your comments or write to the Product Manager at the address below
Fax: 0181-687 5001



©HSS Hire Service Group Plc 1998 No. 759/01

Group Office: 25 Willow Lane, Mitcham, Surrey CR4 4TS

Web Site: <http://www.hss.co.uk>

Operating & Safety Guide 759

HSS Hire Shops



Floor Scrubber Dryer

A heavy – duty scrubber with vacuum system to collect soiled water.




Code 58621

GENERAL SAFETY


For advice on the safety and suitability of this equipment contact your local HSS Hire Shop.

This equipment has been designed to be used by an able bodied adult. If you suffer from either a temporary or permanent disability, you must seek expert advice before using this equipment.

Keep children, animals and bystanders away from the work area.

 Never use this equipment if you are ill, feeling tired, or under the influence of alcohol or drugs.

This equipment should only be used by a competent person who has read and understood these instructions.

 Wear practical, protective clothing, gloves and footwear. Avoid loose garments and jewellery that could get in the way of the work, tie back long hair.

Never carry, lift or pull the equipment by its power supply cable.

Check the equipment before use. If it shows signs of damage or excessive wear, return it.

Keep cleaning equipment and chemicals out of the reach of children and pets.

Never operate electric cleaning equipment or electric switches with wet hands.

Never use HSS Scrubber Dryers to remove asbestos and similarly dangerous dusts.

Always switch OFF the equipment when not in use.

ELECTRICAL SAFETY


Most HSS Floor Scrubber dryers plug into a standard 240v 13amp power socket. However, 110v models (with a round yellow plug) must be provided with a suitable 110v generated supply, or powered from the mains via a suitable 110v transformer.

If the equipment fails, or if its flex or plug becomes damaged, return it. Never try to repair it yourself.

Keep flexes out of harm's way, and clear of the work area.

Extension leads should be fully unwound and loosely coiled, away from the equipment. Never run them through water, over sharp edges or where they could trip someone.

Keep the equipment dry, using electrical equipment in very damp or wet conditions can be dangerous.

 To reduce the risk of electric shock, use a suitable RCD (Residual Current-Operated Device) available from your local HSS Hire Shop. Alternatively power the equipment from a mains circuit with a built in RCD.

Ensure the Floor Scrubber Dryer and power socket are switched OFF before plugging into the power supply.

GETTING STARTED

Clear the floor area of all furniture, if this is impractical, the furniture will have to be moved around as the work progresses. Tie up any long curtains that touch the floor. Sweep and clear the entire floor area.

Take the unit into the room and unroll the power lead.

NOTE; This machine must be switched OFF and unplugged from its power supply when ever you are making any adjustments to it!

If required, fit new brushes to the machine, grasp the front of cleaning head and tilt it on its side to expose its underside, then push a brush onto each of the three sets of spindles.

You can now reposition the cleaning head.

Mix any cleaning solution with clean, hand hot (max. 60 degrees) water. Fill the upper clean water tank with the mixture, ensuring you DO NOT spill any over the machine.

Small spills must be wiped up immediately, if you spill a large amount, STOP and contact your local HSS Hire Shop for advice.

Where practicable, plug the machine into a power point that is not in the same room and switch the supply ON.

All that remains is to plug the unit into its power supply and switch the supply ON.

BASIC TECHNIQUES

Open the fluid valve on the base of the clean water tank, this is not the main fluid control but must be opened and closed during or after use.

Turn the brush ON/OFF switch to the ON position, this will activate the contra-rotating heads. You can now switch on the vacuum motor.

