

PR 30-HVSG ROTATING LASER QUICK GUIDE

The tool automatically levels itself on a surface preferably within a range of $\pm 5^\circ$ and can be used vertically, horizontally and for slopes in one or two planes.

Horizontal:

Press the on / off button. The “auto levelling” LED blinks green and the levelling status is shown on the laser receiver display.

The laser switches on and the beam begins to rotate as soon as the tool has levelled itself.

Vertical:

Double-click the “AUTO” key on the receiver. Double-click the key again to begin the laser plane alignment procedure. A beeping signal tone is emitted while this is taking place. Once the position is reached (i.e. the marking point is found), a constant signal tone with a duration of 5 seconds indicates that the process is complete.

Detailed instructions (including setting up the slope) can be found in the tool’s instruction manual.

Box contents:

- | | | | |
|---|--|---|--------------------------|
| 1 | 1x Rotating laser PR 30-HVSG | 5 | 1x Battery pack B 12/2.6 |
| 2 | 1x Target plate PRA 54 (CM/IN) | 6 | 1x Case PR2-HS A12 |
| 3 | 1x Remote control / laser receiver PRA 30G | | |
| 4 | 1x Battery charger C 4/12-50 230V box | | |

***Please note all contents must be present when hired out and returned. Missing items will be subject to charges.**



Know Your Symbols

HSS have created clear Icons to inform the hirer of their responsibilities towards the safe use of hire equipment.

These are designed to reduce the amount of different safety information labels required for each product for hire.

General use PPE / Warning

Clearly marked minimum PPE will be visible on all equipment,



Correct PPE must be worn



HAV Hand Arm Vibration



Danger Rotating blade



Danger Hot exhaust



Danger Electric shock



Caution Abrasive Wheel



Caution Finger trap

Fuel and Supply Types



Pe
Petrol



Di
Diesel



2t
2 - Stroke Petrol



EI
Electric

Safe Procedures

All hirers must understand and respect the safe procedures of all equipment.

It is the responsibility of the hirer to maintain and return the equipment in a clean condition and good working order.



Ro
Read OPS Guide



Ou
Outdoor Use only



HI
Heavy Lifting



Cd
Check Oil daily




Cf
Check Fuel daily



Cw
Check Water daily



Bc
Battery Care

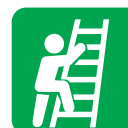

Sh
Safe Height Working



Swl
Refer to Data Plate




V
Check Power Voltage Data Plate

Electrical Safety

Safe wiring procedures.



Ea
Must be Earthed Class 1

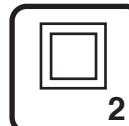

Doi
Double Insulated Class 2



Enl
Earth Live Neutral Wire Coding

Return Responsibility

Charges apply to equipment returned dirty and damaged.



Cc
Cleaning Charge



Rc
Repair Charge